

Work Order ID 124001

September-05-14 9:10:55 AM

124001

Page 1

Item ID: D3272-1 Accept ***N900040100*** Setup Start ***NS1***
Revision ID: Stop ***NS2***
Item Name: Step
Start Date: 9/05/14 Start Qty: 1.00 ***1*** Cust Item ID:
Required Date: 9/05/14 Req'd Qty: 1.00 ***1*** Customer:
Reference:

Approvals: Process Plan: MLJ Date: 1409-05 Tooling: _____ Date: _____ Run Start ***NR1***
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
D3272	Rev B								
100	Large Fab	0.00							
100									
Large Fab	Memo	0.00							
Large Fab	***SQUARE ONE END BEFORE CUTTING OTHER END***								
	1-Cut D2622-120 extrusion to 116.25" long as per Dwg D3272 using cutting table setup DT 8185-2A								
	2-Drill extrusion as per Dwg D3272 using Jig DT8680 for rivets.								
	3-Deburr								
110	QC6- Inspect dimensions to drawing	0.00							
110									
QC	Memo	0.00							
Quality Control									

1x DL14-9-9

1x SEP 09 2014 **DAS 24 9-89**

Work Order ID 124001

September-05-14 9:10:55 AM

124001

Page 2

Item ID: D3272-1 Accept ***N900040100*** Setup Start ***NS1***
 Revision ID: Stop ***NS2***
 Item Name: Step
 Start Date: 9/05/14 Start Qty: 1.00 ***1*** Cust Item ID:
 Required Date: 9/05/14 Req'd Qty: 1.00 ***1*** Customer:
 Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____ Run Start ***NR1***
 QC: _____ Date: _____ SPC (Y/N): _____ Date: _____ Stop ***NR2***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120	Identify as per dwg & Stock Location: <u>WA #3</u>	0.00						SEP 09 2014	DAS
120									24
Packaging	Memo	0.00							9-89
Packaging									
130	QC21- Final Inspection - Work Order Release	0.00							
130									
QC	Memo	0.00							
Quality Control									

MLJ 14-09-11
 MF
 14-9-10

Picklist Print

September-05-14 9:10:58 AM

Page 1

Work Order ID: 124001

124001

Parent Item: D3272-1

D3272-1

Parent Item Name: Step

Start Date: 9/05/14

Required Date: 9/05/14

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:A New Issue 07-06-09 JLM

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D2622-120C

Manufactured No

100

Each

115.0000

1

1

D2622-120C

Step Extrusion

Location

Loc Qty

Loc Code

HALL

111

109575

32

119621

79

WA003

4

101765

1

115141

3

IX

DL 14-9-9



DESIGN <i>GP</i>	DRAWN BY <i>[Signature]</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 1 OF 3
DATE 07.05.18		TITLE STEP ASSEMBLY, HI LONG	SCALE NTS
A	04.03.01	NEW ISSUE	
B	07.05.18	D3272-1 WAS D2622-120	

RELEASED

07.06.04 *[Signature]*

△
B

QTY -041	QTY -042	PART NUMBER	DESCRIPTION
X		D3272-041	STEP ASSEMBLY, HIGH LONG (LH)
	X	D3272-042	STEP ASSEMBLY, HIGH LONG (RH)
1	1	D3065-041	LEG ASSEMBLY
2	2	D3066-1	SPACER
2	2	D3067-1	END PLATE
2	2	D3219-1	SUPPORT
1	1	D3272-1	STEP
16	16	MS20600AD4W4	RIVET

GENERAL NOTES:

- 1) D3272-041 SHOWN. FOR D3272-042, INSTALL D3219-1 SUPPORT OPPOSITE SIDE
- 2) WELD PER DART QSI 004
- 3) FINISH: CHEMICAL CONVERSION COAT PER DART QSI 005.4.1
POWDER COAT ASSEMBLY WHITE (4.3.5.1) PER DART QSI 005 4.3
BLACK ANTI-SKID PAINT PER DART QSI 005 4.4
- 4) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED.
- 5) ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE NOTED.
- 6) BREAK ALL SHARP EDGES 0.005 TO 0.010 MAX.


SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 125/001 M.C.S.
14-09-05

Copyright © 2004 by DART AEROSPACE LTD


THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.



DESIGN	q	DRAWN BY	JB	DART AEROSPACE LTD
CHECKED	CE	APPROVED	JB	HAWKESBURY, ONTARIO, CANADA
DATE	07.05.18	DRAWING NO.	D3272	REV. B
		TITLE	STEP ASSEMBLY, HI LONG	SHEET 2 OF 3
				SCALE 1:20

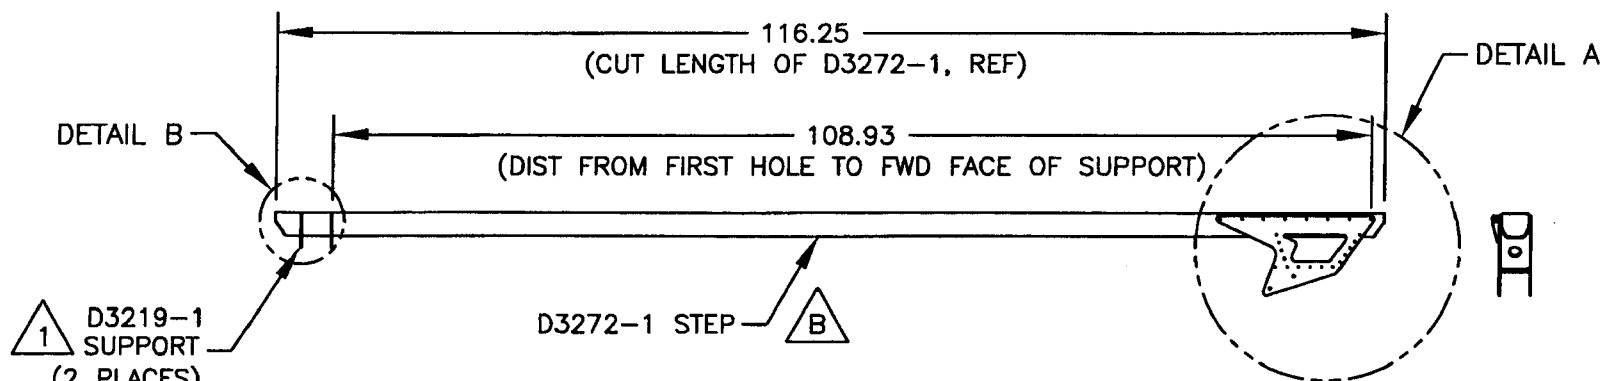

D3272-041 STEP ASSEMBLY (LH. SHOWN)
D3272-042 STEP ASSEMBLY (RH, OPPOSITE)

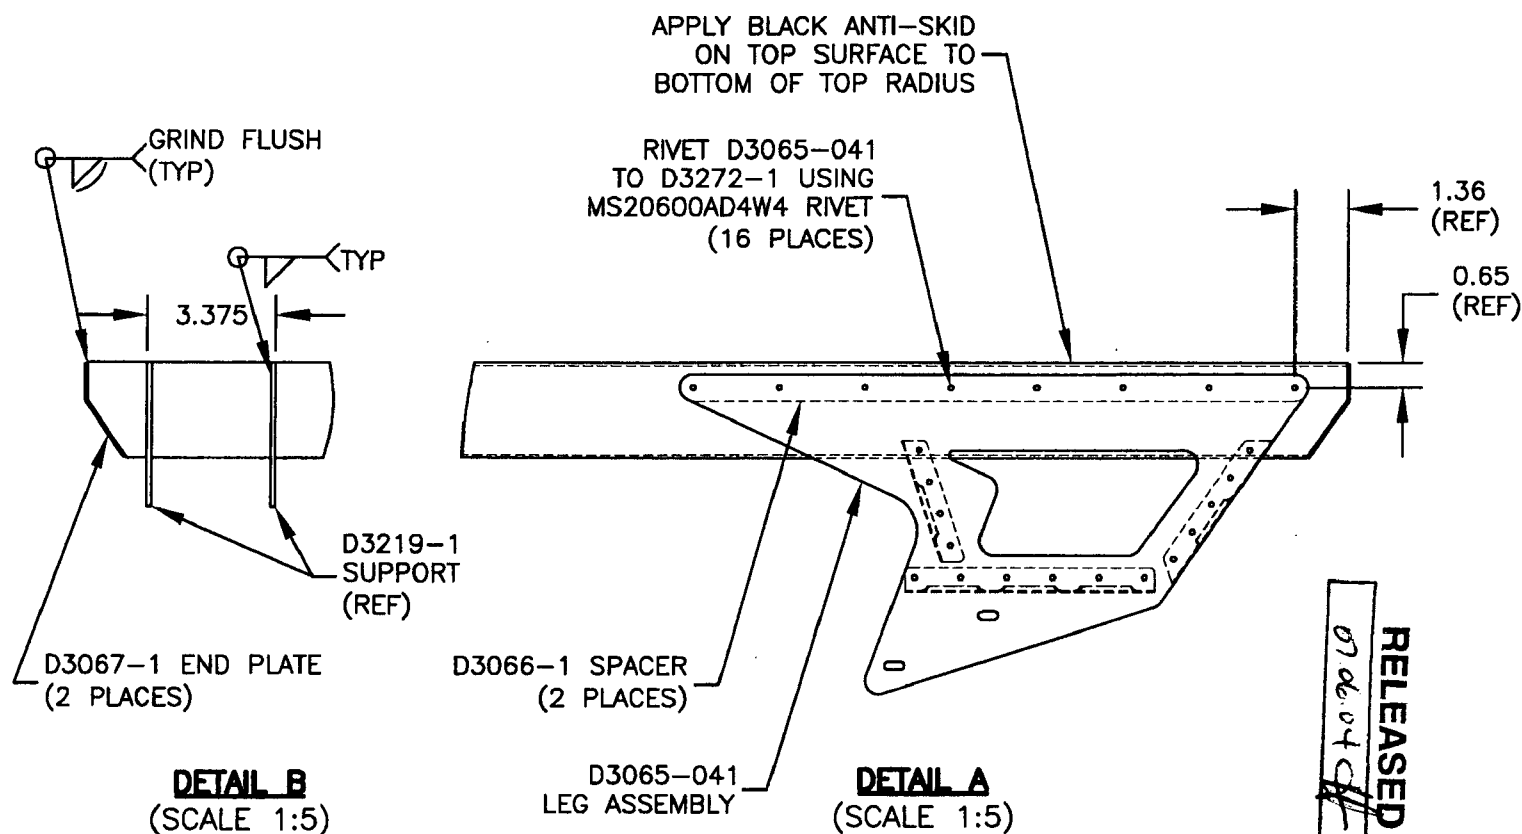


RELEASED
07.06.04



DESIGN <i>qp</i>	DRAWN BY <i>JB</i>	DART AEROSPACE LTD HAWKESBURY, ONTARIO, CANADA	
CHECKED <i>LE</i>	APPROVED <i>[Signature]</i>	DRAWING NO. D3272	REV. B SHEET 3 OF 3
DATE 07.05.18	TITLE STEP ASSEMBLY, HI LONG		SCALE 1:20

RELEASED


07.06.04 *[Signature]*

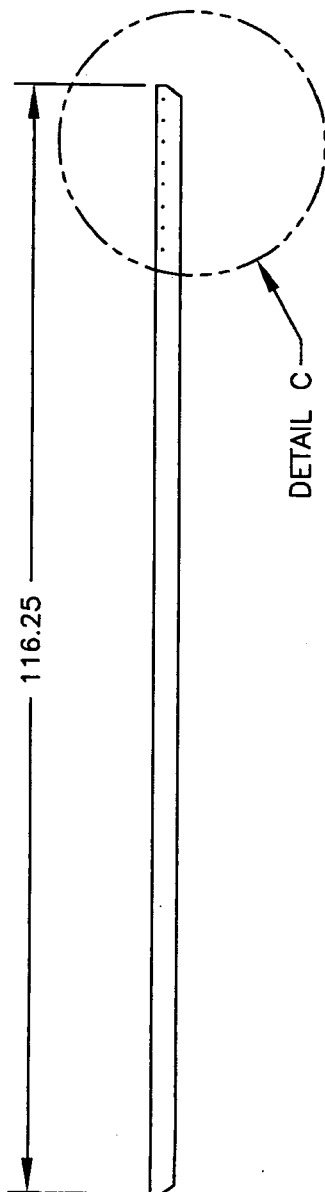

DETAIL C

△ D3272-1 STEP

(MAKE FROM D2622-120 STEP EXTRUSION)

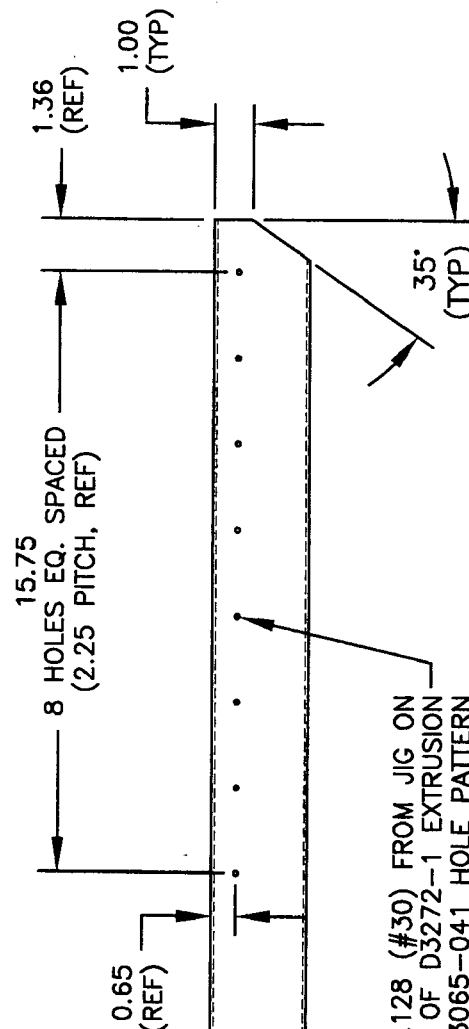

DRILL $\phi 0.128$ (#30) FROM JIG ON BOTH SIDES OF D3272-1 EXTRUSION TO MATCH D3065-041 HOLE PATTERN

DETAIL C

(SCALE 1:5)

Copyright © 2004 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.